



# QuikSeam™

## Full Depth Joint and Seam Sealing


### Installation & How to Use QuikSeam

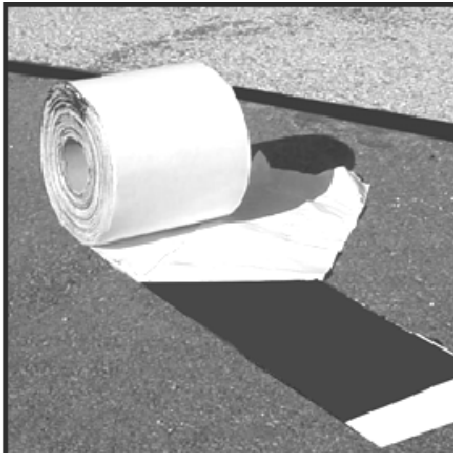


- 1 Before laying new asphalt, place QuikSeam™ strip sealant on all exposed vertical edges of existing pavement. Extend strip at least 1" upward and fold onto existing surface. Using a small torch, tack QuikSeam to surface at spacings that will prevent sealant movement during asphalt placement. All other QuikSeam must contact exposed vertical edges and lay flat upon base material.

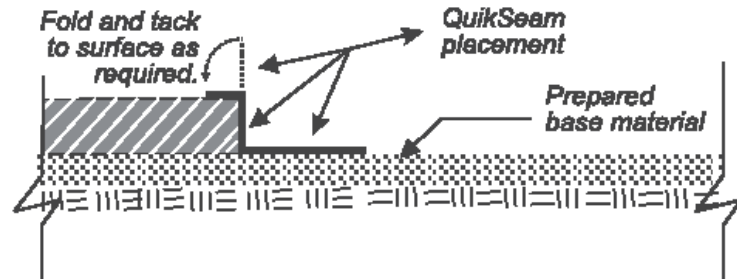

- 2 Place and compact new asphalt while keeping QuikSeam in place at all times.

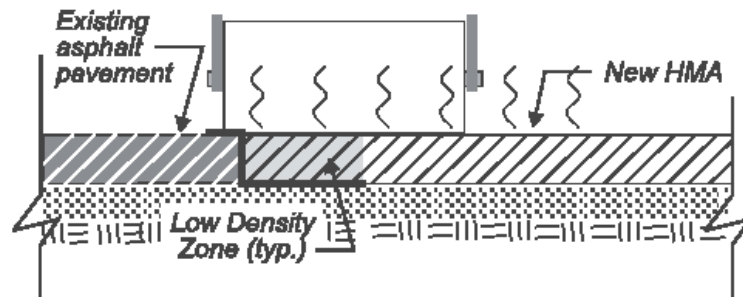

- 3 QuikSeam forms a continuous full-depth joint seal and penetrates hot asphalt near the joint in response to heat and compaction pressures.

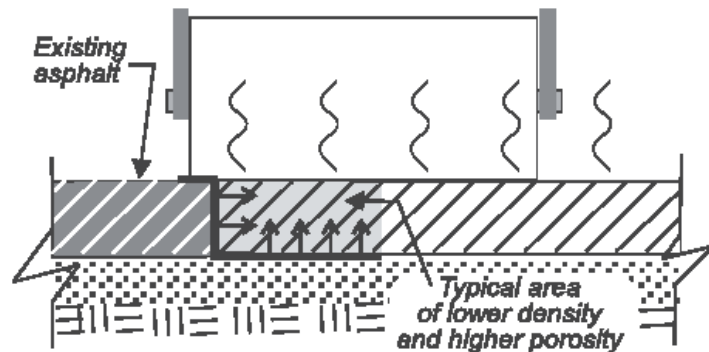

As with all sealent materials, contacting surfaces must be completely clean, dry and free of foreign and loose materials. When used for repairing cuts in existing pavements, openings should be squarely and evenly cut.



**Do not allow material to come into contact with skin when in a Hot Melted State. Wear protective clothing and Maintain safe working practices. Protect yourself and others.**

**Quik Pave Products, Inc.**

7968 Wesselman Road Cleves OH  
888-825-1917 [www.quikpave.com](http://www.quikpave.com)